



INSTRUCTIONS FOR USE

CORNUCHEF

Dear customer,

Early in the twentieth century, Henri-Paul Pellapat*, French Grand Master Chef, wrote:

“True values and just principles
never diminish with age”

At the beginning of this new millenium, and for the years to come, the above phrase is, and shall remain, the guiding principle of our company. Authenticity without artifice and innovation in the respect of time-honoured traditions are the guiding forces behind each step in the creation of each of our cookers.

Which is why every cooker we build has a soul.

With every recipe, the versatility and conviviality of your cooker will become more and more apparent, along with the added touch of warmth and atmosphere it lends to your home.

This booklet not only provides instructions for use, but also several rules to follow which will facilitate the maintenance of your “La Cornue”, together with a number of valuable tips from some of today’s top chefs to enhance your own culinary talents.

We thank you for your trust.

Xavier Dupuy
Chairman and Managing Director

* Henri-Paul Pellapat - Professor of cooking and pastry-making at the Ecole Cordon Bleu. Public training officer, Chevalier of the Agricultural Order of Merit.

“LA CORNUE” GENERAL INFORMATION AND RECOMMENDATIONS FOR USE

BY HENRI-PAUL PELLAPRAT, GRAND MASTER CHEF OF THE ECOLE CORDON BLEU

« Before you use your sumptuous "La Cornue" cooker for the first time, there are a number of things I would like to tell you, particularly about its advantages and special features.

There is no getting away from knowing the people and things that make up your household. In the same way, the "La Cornue" you now own, or soon will own, will quickly prove itself to be an integral part of your home!

An important and time-saving feature of your "La Cornue", is that it cooks by enveloping food with hot air, a system which eliminates any possibility of dryness, thus preserving all the intrinsic flavour and nutritional value of each of your dishes. This system allows the chef to complete other tasks around the house, while his/her roast or fish is cooking, as long as the cooking times are respected and not exceeded.

A second and important advantage of your "La Cornue", is that meat only loses 7% to 8% of its weight during the cooking process, instead of the usual 15% to 20% when using other oven cooking systems.

And, finally, the third advantage of your "La Cornue", is that it eliminates the need to keep checking food during cooking. What's more, there is no need to baste your roasts! This may sound a bit paradoxical, but it's true, and you will soon understand why. Why do we have to baste our roasts, and so frequently? Because, in general, the heat of an oven dries out the meat.

Today, "La Cornue" has taken cooking to new heights. Its innovative design has done away with the need to open and close the oven numerous times for basting purposes. When your roast is ready for cooking in your "La Cornue", you simply check the cooking time in the chapter on roasts, and according to its weight, set the correct cooking temperature. You'll get perfect results every time.

But roasts are not the only delights cooked to perfection by “La Cornue”. Dishes of all kinds, stews, fish, eggs, vegetables, and so much more, will satisfy even the most demanding palate.»

(Excerpt from the introduction of the cookbook studied for La Cornue in 1930)

Your “La Cornue” range cooker offers you an opportunity to explore an exceptional level of culinary expertise in a domestic environment.

Take the time to familiarise yourself with the product. You will quickly realise that despite its highly sophisticated appearance, the range cooker is rather simple to use.

Admittedly, even on first use, you will notice differences between this cooker and your previous one. It is true that for certain elements, such as the hot plate, they rarely exist on household appliances. However, when you become used to it, you will wonder how you did without.

For each cooking element of the range, you will find instructions. It is up to you to apply these guidelines to your everyday cooking style.

This is a common instruction manual which is available for all La Cornue appliances. Therefore, it is to be expected that not all the equipment described in the manual applies to your particular model.

A gas range cooker emits hot air and humidity. Therefore, it is essential that the space in which the cooker is used be well vented either by a natural extraction of air or by a mechanical extractor hood.

Intensive or extended use of the oven may require additional airing, for instance by opening a window, or more efficient ventilation by increasing the mechanical fan power if there is one.

Use 47

General description 47

The cooking surface 48

High heat 48

Simmering plate..... 49

Electric hobs 50

Ceramic hobs 50

Induction hob 51

Teppan - Yaki 55

Joker plate 56

The “La Cornue” vaulted oven 57

Oven dishes 57

The cooking principle 58

The gas vaulted oven 59

The electric vaulted oven 59

Grill function 60

Advice on usage 61

Safety thermostat 61

Baking stone (option) 64

The electric warming cupboard 65

Upkeep 67

Front panels 67

Finishes 68

The hob 69

High heat 69

Simmering plate 70

Joker plate 70

Electric hobs 71

Ceramic hobs 71

Induction hob 72

Teppan - Yaki 72

The stainless steel surround and back panel 73

Oven 74

“Clean email” oven..... 74

Baking stone (option)..... 74

Extractor hood 75

THE USE OF AN EXCEPTIONAL COOKER

GENERAL DESCRIPTION

This document is common to all the models in the Cornuchef line. The main characteristics of each product are given below:

STOVES:

Grand-Maman 90 (model GM2, width 90 cm)
Grand-Papa 135 (model GP2, width 135 cm)

HOBS:

Grand-Maman hob 90 (model TM2, width 90 cm)
Grand-Papa hob 135 (model TP2, width 135 cm)

OPTIONS:

Pizza stone (only in the large electric vault oven)
Cast-iron Joker plate (reversible for simmering or grilling)

HOODS:

Grand-Maman 90 hood (model H09, width 90 cm)
Grand-Papa 130 hood (model H13, width 130 cm)



THE COOKING SURFACE

High heat



A normal "La Cornue" burner in the Cornuchef range has a thermal power of 3 kW and a small burner has a thermal power of 1.7 kW.

A wide range of heat intensities is therefore at your disposal.

They are specially designed to provide a stable flame, with no release of carbon dioxide, and are equipped with a safety thermocouple: if the flame goes out because of a spill or draft the gas supply is automatically shut off. For optimal use, we recommend using pots and pans with a base diameter larger than 12 cm.


To ignite a burner: the gas is turned on by pressing in the control knob and turning it to the left, to the "high flame" position.

A spark directly lights the gas once the knob is pressed and turned.

Keep the knob pressed in for 5 to 10 seconds, this short period of time is needed for the safety device to be activated. You will hear ticking round. This means that the electronic ignition system is working properly.

When you release the knob, the burner should remain lit: the safety device is therefore in operation.

If the burner is out: repeat the operation, keeping the control knob pressed in for a little longer this time. When the system is new, the safety device takes a little longer to activate.

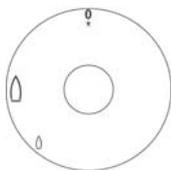

Then adjust the burner to between "high flame" and "low flame", to obtain the level of heat you desire.

Low: this is obtained by turning the knob as far to the left as possible, to the "low flame" position.

Turning off: Turn the knob clockwise until it is in a vertical position.

As the heat generated by the "La Cornue" burner is greater than that of a standard burner, the first few times you use it, do not use the "high flame" position when browning or frying.

However, power is not synonymous with consumption, as this considerably reduces cooking time. Whenever possible, only use the high flame position for grilling meat, quick frying or boiling.

The small simmering plate combines both the traditional technology and the power of a 3 kW central gas burner or 1.3 kW for the electric simmering plate. This is the cooking element preferred by professionals, because of its great versatility. One of its many advantages is that it recreates the type of heat once provided by old cast-iron wood and coal burners.

Nothing better has been invented since!
The heat is evenly distributed, regular, constant and economical.

Turn on your simmering plate before preparing your ingredients, as a ten-minute preheating time is recommended (compensated for by the reduced cooking time). The generously-sized cooking surface provides variable cooking temperatures: hot at the centre and diminishing in intensity towards the edges. This means you can work with 3 or 4 pans at the same time, without having to manipulate the knob.



We call this surface the "chef's piano".

Following are a few examples of how to use the simmering plate :

- *you have brought salted water to a boil over a high flame; as soon as you add your vegetables, you continue to cook on the simmering plate;*
- *you whisk your sauces and creams, with your saucepan in the middle; when they begin to thicken, you move your saucepan closer to the edge, while continuing to mix;*
- *you are frying and browning your pieces of lamb or veal over a high flame; you then move them to the plate to simmer and cook.*

Contact between the simmering plate and your cooking utensil is always uniform, ensuring a perfectly even distribution of heat.

In addition to its "cooking" and simmering function, it can be used to obtain high heat for your large-size cooking utensils, by removing the disc from the middle (for fish poachers, wok or jam basins, for example).

Do not use maximum heat for prolonged periods, as this could cause the back splash to deform.

With use, your simmering plate will become even more beautiful as it develops its natural patina.

Electric hobs

Mixed gas-electric cookers come with two standard round electric hobs (18 and 22 cm diameter, 2 000 W power) to be used as a complement to the gas burners.




If your cooker is all-electric, these round hotplates are used for all primary functions.

The electric simmering plate (28 x 48 cm in size, 1 300 W power) is reserved for this type of cooker.

When cooking, do not hesitate to set your electric hobs to different temperatures:

- high (not forgetting to place a saucepan of water on top, which helps to keep the plate in good condition);
- medium ;
- low.

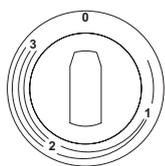

With different temperature settings at your disposal at the same time, you can work in accordance with the simmering plate principle, without having to lower or raise the temperature of any one hotplate.

The temperatures required for cooking one piece of meat or fish are obtained by rotating between hotplates, and not by manipulating a control knob.

Ceramic hobs

The ceramic hob is composed of two burners:

- a single-circuit plate, 14.5 cm dia-meter, with a power of 1 200 W;
- a double-circuit plate, 13.6 cm dia-meter, with 800 W power in the centre. When both circuits are used together, a total of 1 800 W ensures a 19.5 cm diameter cooking area.

The power of the single or double burner is set by positioning the knob to a number between 1 to 6.

Double-circuit operating: to enlarge the double circuit heating area, simply turn the corresponding knob to the right, beyond 6, to "0". You will hear a click from the micro-switch, which lights the peripheral element. The power of the double burner can be set by returning to any number between 6 and 1.

It is impossible to only ignite the exterior heating area

The cooking surface is resistant to thermal shocks and both heat and cold. Nevertheless, any periodic mechanical shock, due, for example, to dropping a saltshaker, can have a more damaging effect.

Please note: if the surface is cracked/fractured, immediately disconnect the appliance or the relevant part of the supply.

It is strongly recommended to keep anything likely to melt, such as tin foil and plastic items, at a distance from the hob. The surface of the vitro-ceramic element may be hot, even if the indicator light is not turned on.


This surface must not be used as a work surface area for resting pots and pans.

Any cooking utensil, with a base at least as large as the cooking area, can be used. If the base is slightly larger, use of energy is optimal. The bottoms of pots and pans should be slightly concave, as they dilate when heated and sit better on the hotplate, which enhances energy distribution.


Induction hob

Your **induction hob uses** the magnetic properties of most pans used on ordinary hobs to create rapid heat.

With the control buttons at the front of the hob, you control the electric supply, which creates a magnetic field. This field induces currents in the base of the pan placed on the hob. These currents, called "induction currents", instantly heat the pan which passes on its heat to

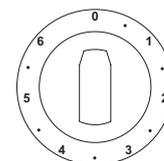

single burner

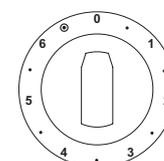

double burner



the food it contains.

The heat is produced directly inside the pan. Therefore the cooking is done with practically no energy loss between the induction hob and the food. The appliance's heating power is used to its full.

By removing the pan from the induction hob, or simply turning the hob off with the control buttons, you instantly stop the cooking.

The cooking is totally controlled by an electronic circuit, which provides great flexibility and incomparable precision of control.


The power and the efficiency of an induction hob are far superior to those of a gas or electric hob.

How to use your induction hob.

The 18 cm or 21 cm cooking zone adapts itself and automatically recognises the diameter of the pan used (12 to 25 cm), and so produces an even distribution of heat in the pan and ensures all the food is cooked at the same heat.

The heat settings of your hob range from 200 Watts to 2 400 Watts for the small burner (18 cm diameter) or from 200 Watts to 2 800 Watts for the large burner (21 cm diameter).

The maximum power on both burners is 2 800 W.

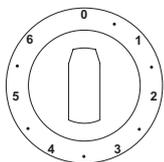

The power is set by turning the control knob from position 1 to 6.

To stop the hob, turn the knob to 0, the indicator light will go out.

The indicator light indicates two things:

1. Normal operation

When the generator is working properly, the indicator light is always on.

The light blinks when not enough power is generated. When both lights are on, the generator is working properly.

2. Problem

A blinking light when the burner is on indicates that there is no pan on the burner or that the pan is not suited for an induction hob.

The pans most suitable for use on your induction hob.

- ENAMELLED STEEL PANS WITH OR WITHOUT A NON-STICK COATING

Casserole pot, chip-pan, frying-pan, meat grill...

- CAST-IRON PANS.

To avoid scratching the glass surface of your hob, choose a pan with an enamelled base or otherwise avoid sliding it across the hob surface.

- STAINLESS STEEL PANS SUITED FOR INDUCTION.

Most stainless steel pans are suited for induction cooking (saucepans, stockpots, frying pans, and chip-pans).

- ALUMINIUM PANS WITH SPECIAL BASES.

NOTE : EVEN IF THE BASE OF THE PAN IS NOT PERFECTLY FLAT IT MAY BE SUITABLE, AS LONG AS IT IS NOT TOO DEFORMED.

There is an induction class logo "class induction" on the hob. If you buy a pan with this same logo, you can be sure that it is perfectly compatible with your hob when used in the normal way.

INCOMPATIBLE MATERIALS

Pans made of glass, ceramic, earthenware, aluminium that has no special base, copper and non-magnetic stainless steel.

THE "HOB" TEST :

The state-of-the-art technology used in your induction hob enables it to recognise most sorts of pans.

Place your pan on a heating zone set at 2, if the indicator light remains stable then your pan is compatible. If it flashes on and off then your pan can not be used for induction cooking.

CORRECT USE :

- Best results will be obtained by using a pan, which has a similar diameter (at least 12 cm), to that of the pattern on the glass surface.
- In any case, the pan must be centred on the cooking zone.

PRECAUTIONS :

- When using a pan with a non-stick coating on the inside (Teflon) with little or no fat, you

can pre-heat it on setting 4 or 5 for a short moment but never use setting 6. You may damage your pans.

- Do not heat up an unopened tin of food. It may burst open (moreover, this precaution is valid for all other cooking methods).

RECOMMENDATIONS :

- Never use aluminium foil for cooking and never put food wrapped in aluminium foil directly onto the induction hob. The aluminium would melt and damage your appliance permanently. Generally speaking, never put aluminium foil or plastic on hot surfaces.

- If a crack appears on the surface, immediately disconnect the hob from the electricity supply.

- Never use your hob to store things on, whatever the things may be.

Integrated safeguards

Under your hob, a ventilator draws in air, blowing it out through openings at the front. This protects the electronic circuits from overheating.

A probe constantly monitors the temperature of the electronic circuits. If the temperature becomes excessively high the hob is automatically turned off.

The heating zone is equipped with a probe, which constantly detects its temperature, and so the risk of over-heating due to empty saucepans is avoided.

A small object like a fork, a spoon or even a ring..., placed on the turned-on hob is not identified as a pan. The indicator flashes but no heating power is supplied.

This safeguard device works in the same way when it detects a pan, which is not suited to induction cooking.

You are advised not to put metallic kitchen utensils, knives and forks or other metal objects too close to pans during cooking.

When the induction hob is in operation do not put objects that can be magnetised on the glass surface (e.g. credit cards, cassettes,).

In the event of spills or splashes onto the induction hob (glass surface and keyboard), the appliance's electronic circuits are protected and therefore cannot be damaged.

For the attention of people equipped with pacemakers or active implants :

The hob complies with electromagnetic perturbation standards in force. Your induction hob

therefore fully meets legal requirements (directives 89/336/CEE). It has been designed so that it does not interfere with the working of other electric appliances provided that they respect the same regulations.

Your induction hob generates electromagnetic fields in its very close vicinity. In order to avoid interference between your hob and a pacemaker it is essential that the pacemaker be designed in compliance with the regulations relating to it.

In this respect, we can only guarantee the compliance of our own product. To check that the pacemaker complies with standards or to enquire about possible incompatibilities you should contact the manufacturer or your own doctor.

Teppan-Yaki

Owing to Japan's tradition of excellence in refined and fresh cooking, the Teppan-Yaki is greatly appreciated.

This Japanese grill allows anyone who uses it to cook efficiently, quickly and with enormous panache and style.

All it takes is to season the food generously and flip it frequently until the food appears cooked as one desires.

Japan is a country where fish is an integral part of the diet and Teppan-Yaki lives up to the tradition.


With this ancestral cooking technique, the Teppan-Yaki combines the old traditions and new technology which makes for a marvellous culinary experience.

The Japanese Teppan-Yaki is equipped with a thermostat heating element and by using the knob, one can control the temperature ranging from 50 °C (122 °F) - position 1 to 250 °C (482 °F) - position 6. As soon as the temperature reaches its peak, the green indicator light switches off.

position 1 = 50 °C (122 °F)
position 2 = 90 °C (194 °F)

position 3 = 130 °C (266 °F)
position 4 = 170 °C (338 °F)

position 5 = 210 °C (410 °F),
position 6 = 250 °C (482 °F).

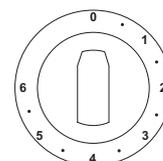

Heat the grill until the desired temperature is reached.

Lightly dab the surface of the grill with (vegetable) oil before putting in the food to be grilled. Then, there is no need to add any oil.

The grill is hotter at the centre than at the sides. The sides can be used for keeping food warm or for continuing to cook in depth.

You can grill shellfish and fish on the Teppan-Yaki as well as flatter pieces of meat, for instance: hamburgers, sausages, fillets of pork, chicken breast or wings, turkey slices, lamb cutlets etc. as well as vegetables, for instance: onion rings, mushrooms, sliced broccoli or cauliflower, peppers, courgettes etc.

The removable Joker plate

Your reversible Joker simmering plate is an accessory that you will put on top of two gasburners of the same intensity or on the central high flame.



It needs to be preheated for approximately 10 minutes. Adjust it according to the cooking desired: it is not necessary to set the gas at maximum intensity as after too long a period, it could result in deforming the "skirting".

This plate is made of enamelled cast-iron and can be used on both sides for different functions; one side has grooves and the other is smooth.

The grooved side is recommended for grilling meat (rib of beef or lamb, whole fish...); the piece of meat is well seared and precisely cooked: very rare, rare or medium rare.



The smooth side is recommended for cooking shellfish and seafood (fish steaks, salmon fillets), eggs, pancakes, oriental cooking, and also simmering, by placing the plate on the central flame.

Before placing the pieces to be cooked on the plate, you can baste them with some fat, but avoid putting oil directly on the plate, it would be difficult to clean.

Its greatest quality is to exactly recreate the type of heat of the cast-iron hot tops on the old coal and wood stoves: the heat is perfectly distributed, regular, economic and constant.

A large cooking surface with professional characteristics is provided, with various degrees of temperature, diminishing from the centre towards the edges.

Lastly, the plate always offers a uniform and total contact with your utensil and gives perfect heat distribution.

THE VAULTED OVEN

The famous vaulted ovens by "La Cornue" will enable you to prepare fabulous dishes. Take the time to understand the basics of the design. It will help you make the most of its cooking potential.

The oven dishes

There are several different trays in your oven

The **pastry tray** with a nonstick coating. This is intended exclusively for pastry-making or for ingredients to be grilled under the gas or electric oven grill.

When it is not in use, store it away from the oven because it can act as a heat shield when using the main tray for cooking.

The **"shelf" tray acts as a support** for all trays which are used in this oven.



The **"large" tray** which has raised sides and which houses **two small grill trays** allows for the following:

- to place a roast in a terra cotta dish to sit on the grill trays. Therefore, by using this system one makes the most of the natural air convection, allowing for the air flow to travel round and under the food.

- to place to roast directly onto the grill in the larger tray. The roast will remain seasoned as well as remaining medium rare or rare if you desire.

By using the "spit" concept, the hot air envelopes the entire piece of meat regardless of its size. This tray is not designed to rest on the sides of the oven even if it seems to sit comfortably.

The tray must at all times be placed on the "shelf" tray which should be placed at the correct level.

The large size of the shelf tray means that it can be used as a cooking tray itself but is generally used for very large pieces of meat which might not necessarily fit in the "large" tray.

It is recommended to line the "large" tray with aluminium foil as it will facilitate the cleaning process after an oven roast.

The cooking principle

In the case of a traditional oven, the heat is generated from below the oven floor and then travels up along the walls of the oven and along the vault.

This air flow creates a homogeneous atmosphere in which food is cooked and the temperature also stays very stable.

This characteristic is unique and is only found in a "La Cornue" oven. The different heat levels are so stable that in any other oven, a roast does not cook evenly as temperatures do not remain as constant.

When cooking in a "La Cornue" oven, supervision is not necessary.

By keeping the door of the oven well closed during cooking, the water contained in many foods evaporates and therefore, creates a degree of humidity which provides an ideal cooking environment.

All the juices remain and marinate the meat in the process.

The golden crispy outer texture of meat when cooked in a "La Cornue" is due to the caramelisation of the natural sugars derived from the meat and not to carbonisation.

The only real precaution we advise is not to overheat the oven and to respect the cooking times with precision and care according the weight and type of food cooked in the oven.

The thermal environment of this oven has been studied and perfected to avoid dehydration of any type or size of food. The "La Cornue" oven is as well adapted for family home cooking usage as it is for large festive group cooking.

Although surveillance is not required, one can nonetheless open the oven door; the heat acquired does not escape, as the mass of the oven and the air circulation maintain the set temperature.

There is a subtle difference between the use of an electric oven and a gas oven.

The following describes in detail the minor differences.

The Gas Oven will provide an ideal heat after a essential preheating of 15 minutes. Owing to this oven's professional standard, it therefore has a different igniting system from the majority of household appliances.

To light a gas oven with electric ignition position the thermostat (B) to your desired temperature.

In order to control the heat of the gas oven, the system provided is completely automatic. Therefore, it is entirely normal that the flame ignites itself and turns itself off when necessary to keep the temperature stable.

The simmerstat (C) controls the broiler of the vaulted top, the thermostat (B) controls the gas ramp.

The simmerstat and the thermostat both have an indicator light.

Note: The red indicator light which is located at the bottom of the control box signals any default related to the ignition of the ovens. If the light comes on, turn off the oven, verify that the gas outlet is set on the open valve and that the gas oven is properly turned on. Lastly, press the button (G) which is situated above the red button.

It is necessary to press this red button several times before using the range if the cooker has not been in use for a long period of time and to release to defuse any trapped air in the gas circuit.

If the light keeps turning red, contact our after sales team or your local showroom.

Always preheat your oven to the temperature required for cooking.

The Electric Oven

The simmerstat (C) activates the heat resistance of the vaulted grill top, the thermostat (B) activates the heat element under the floor of the oven.

Oven ignition:

- Position the selector switch (D) down, on the "bottom" setting.
- Position the thermostat (B) of the oven at your desired temperature and position the simmerstat (C) at the recommended preheat power.



C
B
G



C
B
D
baking stone
bottom

- After preheating the oven (between 15 and 20 minutes according to temperature), adjust the thermostat and the simmerstat to the desired cooking mode.
- The oven is now ready for use.

Note: The selector switch (D) can be set up or down. The bottom element setting is down and the baking stone setting is up. If you don't have the baking stone option in your electric oven, never set the selector switch up.

To preheat the oven, position the simmerstat of the grill (C) and the thermostat (B) at the desired temperature (power); for a total of 15 minutes.
Generally, the simmerstat (C) should be brought back to "0" as soon as the item of food has been placed in the oven.

Grill Function (gas and electric oven)

Your oven is equipped with an electric grill which is controlled separately from the bottom heating element.

In order to **use the grill**, keep the oven door ajar and to avoid burning the knobs above, pull out the drip tray as a protection shield to keep the control knobs from getting too hot.

In keeping the door open, this oven light is therefore ON and this allows you to keep an eye on the cooking process.

- Adjust the simmerstat (C) to your preferred power.
 - After, a preheating period of between 5 and 10 minutes depending on the temperature, you can place the food to grill.
- The grill tray must be placed at the highest level.
You can also use the pastry tray to brown seafood which requires strong and quick heat.

*Please note that this heat intensity calls for careful supervision.
Certain areas of the range within easy reach can get very hot.
Keep young children away from these hot surfaces.*

The bottom elements are unnecessary for this type of cooking.

Safety thermostat

Your electric oven and grill in the gas oven are equipped with a safety thermostat with manual resetting.

In case the oven or grill overheats or the temperature regulator breaks down, the safety thermostat cuts off the heating element. The safety thermostat will need to be reset by pressing the red button located to the left hand side, beneath the lip on the toe plate.

If the problem persists, switch off the cooker and contact an authorized technician.



safety thermostat

The vaulted oven. Advice on use

You will gradually discover the ideal combinations for fresh fruit - zabaglione, seafood - hollandaise sauce or quenelle - sauce Nantua, etc..

You can use bottom heat in the same way, although this is generally used for adjusting dishes. For example, if the pastry of your tart or quiche is already well cooked but the inside seems to be raw: position the lower thermostat at a minimum temperature or even at 0 and the high simmers-tat at a medium or top power according to how quickly you wish to cook it. For long cooking periods, whether for pastry or terrines, only use the lower oven thermostat.

By using the grill and oven elements, with practice it will become easier to understand and to control the various temperatures which can be achieved for even the most delicate forms of cooking.

Of course, it can also be used for making excellent pastries, pies, quiches and vegetable dishes: the choice of rack level and temperature required calls for just a little more thought.

When roasting, whether lamb, turkey, pork or large fish, place the oven rack on the lowest level of the oven. Cooking often exceeds 40 minutes.

In this case, preheat to 250 °C (480 °F), for 10 to 15 minutes.

Place the dish in the oven, then lower the thermostat to 200 °C (390 °f) or 175 °C (345 °F) for white meat; leave to cook for the time needed: the crust is formed, and in-depth cooking continues.

If you do use the electric oven, you must reduce the grill simmerstat to 0 once the dish has been placed in the oven.

For a Roast or for a rack of beef, lamb, small or medium sized fish, place the grill tray at the mid-level of your oven. Pre-heat at level 280 °C (535 °F) for fifteen minutes, then lower to level 230 °C (450 °F) for approximately 5 to 10 minutes once the dish has been placed in the oven.

If you do use your electric oven, keep the temperature very high at maximum for the vaulted oven for 10 minutes after the dish has been placed into the oven and then reduce the thermostat to approximately 230 °C (450 °F).

Comply with the cooking times which are recommended in your recipe book or by your butcher. We recommend paring all the fat from the meat before cooking.

If you have included a vegetable dish to accompany the meal, you can add a little butter or oil on top to preserve its beautiful colours. In order to grill onions or any other vegetable around a roast always add a bit of oil mixed with butter at the bottom of the dish before adding the vegetables.

If you choose to slice onions into rings, it is recommended to slice everything quite fine to suit the required temperatures.

We suggest you do everything in moderation:

- too much fat and lard will create smoke and will splash grease,
- a temperature which is too high will carbonise all foods.

For pastries the height of the grill tray will depend on the type of cake and on the cooking time. The most intense heat comes from the bottom of the oven. Never place a tray or a dish on this bottom surface.

Apple pies require a top level tray heat in order to brown the apples and heat is also required from below to cook the pastry. Temperature 200 °C (390 °F) on the thermostat and the middle positioning work well together.

To cook a Tarte Tatin, which is generally cooked from the top. Place the thermostat at level 175 or 200 °C (345 - 390 °F) and this should suffice; anything higher than this will burn the pastry before the apples have even had a chance to cook.

For a vegetable gratin or pasta, for the most part, the cooking time is 20 to 25 minutes with a thermostat set at 200 °C (390 °F) (depending on the thickness of the gratin). Naturally, it is necessary for the heat to penetrate from above and below. The lower level, however, will work appropriately for potatoes, pastries and the medium level will work well for fresh vegetables.

For the gratin, position the grill tray at the highest level and insert the gratin dish. Keep the door of the oven ajar and pull the drip tray out to protect the knobs from heating. A notch on the drip tray indicates how far you need to pull out the drip tray. Position the thermostat at 250 - 275°C (480 - 530 °F) and keep a close eye on your dish.

Choosing from a range of closely-related temperatures or cooking times should not be guesswork, but rather based on the size of the meat and your own personal taste.

Th 1	meringues, rock cakes, petits fours, meringue pies, braised meat, casseroles, braised beef stew
Th 2	braised vegetables, sponge fingers, sponge cake, Savoie cake
Th 3/4	caramel custard, pudding, macaroons, choux pastry, soufflés, large brioche, cakes, finger biscuits, white meat
Th 5/6	large pieces of flaky pastry, tarts, flans, white meat roasts, croissants, fish, gratins
Th 7/8	red meat roasts, very rare game

The equivalents between thermostat indications and temperatures, expressed in degrees, are provided below as an indication only.

Th 1 = 100 / 125 °C (210 / 260 °F)

Th 2 = 125 / 150 °C (260 / 300 °F)

Th 3 = 150 / 175 °C (300 / 345 °F)

Th 4 = 175 / 200 °C (345 / 390 °F)

Th 5 = 200 / 225 °C (390 / 435 °F)

Th 6 = 225 / 250 °C (435 / 480 °F)

Th 7 = 250 / 275 °C (480 / 530 °F)

Th 8 = 275 / 300 °C (530 / 570 °F)

Baking Stone (Only as an option of the electric oven)

In using this accessory, you can cook bread, tarts, pizzas etc...thanks to direct contact with a refractory baking stone which stores up intense heat. The temperature of the stone can go as high as 300 °C (570 °F).

The "Baking Stone" option consist of:
a refractory stone, a 3 000 W electric heating element and a stainless steel bread spatula.



To use the "Baking Stone", you must follow these instructions:

- Remove plug filler at the back of the oven.
- Fix the electric heating element into the plug at the back.
- Place the grill shelf at the medium level (2nd level) followed by placing the "Baking Stone" onto the grill shelf.
- Position the selector switch (D) on the setting which indicates "Baking Stone" (up) and the thermostat (B) at the desired temperature.
- After pre-heating (between 10 & 15 minutes in respect to the desired temperature) you are now ready to place your food in the oven.

The pre-heating procedure can also be used by setting the selector switch (D) on the "bottom" position (down) and the thermostat (B) on approximately 220 °C (430 °F). After pre-heating for 15-20 minutes, set the selector switch (D) up and place the food to cook in the oven.

Please note: Before placing the food in the oven on the baking stone, be sure to apply so as to avoid anything adhering to the surface.

When cooking, you can turn on the grill of the oven by positioning the simmerstat (C) on medium or maximum power to activate the heat emission from above.

After cooking with the baking stone, leave the stone in the oven to cool down. Then, remove the stone and the electric element and place the plug cover back into its place which is situated at the back of the oven.

Bread baking:

- Pre-heat the stone for approximately 15 minutes at 220 °C (430 °F) .
- Place the loaf of bread onto the generously floured stone surface.
- Cook the bread from 20 to 30 minutes; at the end of the cooking time turn on the grill (C) at a medium or maximum level. For 5 to 10 minutes to brown the crust of the bread.

Cooking Pizza:

- Pre-heat the stone for 15 minutes at 230 °C (450 °F) approximately.
- Place the pizza on a generously floured surface.
- Cook the pizza for approximately 15 minutes and turn on the grill (C) at maximum for 5 minutes to achieve a crispy topping.

THE ELECTRIC WARMING CUPBOARD (GRAND-PAPA)

The warming cupboard has three purposes. In effect, it can warm up plates and therefore match the warmth of your plates to the warmth of the dish.

It can also be used for warming up certain foods such as foie gras, pasta and meringues.

Finally, it can also be used to keep dishes warm.

The lower level is ideal for keeping food warm, while the upper level is perfect for heating plates.

The thermostat works in two ways: as a switch and a temperature control. In the "O" position, the heating elements are not on.

The minimum temperature of the warming cupboard is 30 °C (85 °F), and the maximum 110 °C (230 °F).

The warming cupboard is equipped with two shelves.



UPKEEP OF AN EXCEPTIONAL COOKER

FRONT PANELS

The external parts, which are not exposed to fat splatters, only require a minimum effort to keep them clean and beautiful. The level of cleaning really depends on the frequency of use and the environmental climate. If kept in a holiday home, especially in a marine climate, it should be thoroughly cleaned before your departure. And isn't it nice to return to a sparkling clean cooker.

Due to the damp environment, the salt in the air and the acidity in the fat attack all metals, even solid brass and stainless steel.

The cleaning products should be chosen according to the surfaces to be cleaned.

Bright coloured enamel fronts

Because the enamel is vitrified, you can use a window-cleaning product on a paper towel.

As fat may splash and splatter when an oven overheats, use an "Ajax Cream" type product and a sponge for cleaning. Enhanced results can be obtained by using window cleaning products.

Stainless steel front panel

For routine cleaning, use terebenthine or domestic alcohol on a piece of paper towel.

Every three to six months, give your brushed steel front panel a thorough cleaning to remove grease.

For this type of in-depth cleaning, use a mild detergent or soft soap, thoroughly diluted in hot water. Then rinse with clean water.

A finishing touch with terebenthine will eliminate all traces of water and detergent.

This is also valid for the stainless steel credenza (part in stainless steel between the cooker and hood).

Matt enamelled coloured fronts (matt black, pebble grey)

Remember that matt colours are fragile by nature.

Matt colours are not vitrified and are therefore not protected: the use of products that are too powerful can leave irrecoverable marks.

However, we have been applying this finish for many years now, as it is extremely easy to clean and maintain. Simply follow our instructions.

Clean in lukewarm water using household soap applied to a non-abrasive sponge or even better why not use domestic soap in gel form. Then rinse in pure water and dry carefully with a paper towel.

FINISHES

Chrome and shiny stainless steel finish

These do not require any particular cleaning. Simply use a window-cleaning product applied to absorbent paper or a cloth to remove any finger marks.

Satin-finish brass

Use a special copper and brass cleaning product, in paste or liquid form, and a soft cloth. Then remove all traces with a damp sponge. By removing product deposits with water, your bars and brackets will stay shinier, longer.

We recommend "Copper Cleaner" from "Spring" or "Bistrot Cuivre" from "Matfer".

Avoid the use of anti-oxidation products, which cause black deposits to form on the appliance and take twice as long to clean off.

THE HOB

As your cooker is made up of a number of different elements (depending on the size), we recommend applying a cleaning procedure adapted to each specific case.

However, it should be noted that, once you have memorised a few “tips”, the maintenance of “La Cornue” cooker is easier than any other, under condition that it is cleaned regularly.

Use a paper towel or a cloth to clean your **hobs**, fast heating hotplate, splashback while they are still warm because grease or food splashes are then easy to remove and do not require any cleaning products.

High heat

Don't forget that high-flame cooking can cause oil and grease to splatter on adjoining cooking elements, including the back panel and table surround.

In this case, clean off any warm grease or oil with a cloth, and polish up where necessary.

Enamelled burner pan and caps

Clean the pan in the sink with washing-up liquid and a sponge: rinse and dry.

In case of burnt grease stains or milk that has boiled over, place the plate in the sink, without water and spray "Décap four" without caustic soda. Leave it to act for about 15 to 30 minutes. Then clean with water and washing-up liquid with a non-abrasive sponge.

Proceed in the same way for the black enamelled burner caps. Rinse and dry the caps well before putting them back in place.

Caution! Check that the holes through which the gas comes out are not obstructed.

Grills in matt enamelled cast iron

This support is not very exposed: simply wipe it with a cloth for routine cleaning.

From time to time, clean the grills with water and washing-up liquid. If they should turn charcoal grey, this does not imply any deterioration. In fact, this cast iron support has a very long service life.

The simmering plate (rectangular surface, with concentric circles) is made of cast iron, a material recognised for its excellent heat distribution properties.

Do not clean the plate with water, as this can cause rust. We recommend using turpentine or methylated spirits.

For everyday care, remember that the ground rule is to wipe the plate off regularly using a paper towel. This will remove grease splashes caused by cooking on the various adjacent devices. As the contact surface between the plate and the utensils is large, cooking on the simmering plate rarely causes spills and splatters.

To remove burnt grease: use a dry, fine emery cloth, double zero or zero, applied by hand or a sanding block, and always in the direction of the brushing; then use methylated spirits or turpentine for a final finishing touch.

With use, the plate tends to darken in colour (charcoal grey).

A "Zébracier" type product can be delicately applied on to the cold surface (sold in hardware stores). Take care to avoid the stainless steel surround.

A small quantity of "Zébracier" on a cloth will enhance the silver colour of the plate; but this is a beautifying product only, and not meant for cleaning (do not apply this product to a dirty or wet plate).

Use small "Jex" pads to remove the most stubborn stains.

The Joker plate

This plate is made from enamelled cast-iron and should be cleaned in a sink and not on the stove.

Remember that the essential rule consists of regularly wiping the plate with absorbent paper each time before you use it; this removes the grease splashes that would burn during re-heating.

If simply wiping does not seem to be enough, wash the plate with washing-up liquid and a sponge; rinse and dry.

The preheating must remain moderate: preheating too strongly is pointless for cooking, in considering the particular heat transmission properties of the cast-iron. In addition, it makes maintenance a lot more difficult.

In case of burnt grease stains, put the plate in the sink, without water and spray standard oven cleaner without caustic soda. Leave it 15 to 30 minutes to act. Then clean with water and washing-up liquid with a non-abrasive sponge.

The electric hobs

Never use water to clean the hot plates and their surrounds.

Small pads and “Impeca” paste should be used for the heating parts. You can also use an slightly moist “Scotchbrite” pad, with a little grease-removing detergent.

See above for the stainless steel surround.

The ceramic hobs

A number of products can be used to protect your hob from greasy stains and any damage caused by sweet foodstuff spills.

These products, which form a shiny protective film, must be applied before the hob is used for the first time.

Your cooking surface, whether warm or cold, should be cleaned on a regular basis, to avoid any build-up of stains and grease.

Light stains can be removed with a damp cloth.

Stubborn stains are easily removed with a razor blade.

Water marks and calcareous deposits, grease stains and metallic traces can be eliminated with “ZIP” stainless steel liquid or powder.

Detergent residue should always be thoroughly removed with a damp cloth, as they can have a corrosive effect when the plate is next used. Always wipe until dry.

Never use abrasive or corrosive detergents, oven sprays, scouring powders, abrasive sponges or steel wool.

Scratches can be caused through the use of pots and pans with uneven or rough bottoms.

These scratches cannot be removed, but in no way do they affect the efficiency of your cooking surface.

The induction hob

Slight stains can be removed simply with a damp piece of kitchen paper.

Spills and splashes should be wiped as soon as possible. Check that they have been removed before using the hob again.

To remove tough stains and metal marks, use a drop of a gentle cleaning product, preferably a cream one.

To remove water and scale marks, use a few drops of white alcohol vinegar.

To finish off, always rinse with clean water and then wipe with absorbent paper.

Be careful not to allow liquid to run into ventilation inlets under the hob.

You are advised not to use abrasive products or scouring powder (steel wool, abrasive sponges). These may leave scratch marks on the visible parts of your hob.

The rubbing of pans may, in the long term, lead to a deterioration of the patterns on the glass ceramic surface.

These defects in appearance do not lead to a non-functioning of the hob or the impossibility of using it and are not covered by the guarantee.

- **Do not immerse your appliance.**
- **Do not clean it under the tap.**
- **Do not wash it in the dishwasher.**

The Teppan - Yaki

After every use, clean the surface with lemon juice and then rinse the surface with cold water.

Remove tough stains with detergent to clean the stainless steel or with a non abrasive sponge.

Remove immediately all remains of food, especially red cabbage, apple or rhubarb compote. Despite the fact that certain foods can last long, they can nonetheless stain.

These types of damage can occur easily and the fact that some food lasts a long time does not necessarily mean they won't stain.

These sorts of damages are not accounted for in the warranty.

Never use any abrasive powders, aggressive detergents or metallic sponges.

Regular maintenance, immediately after every use is highly recommended to avoid any food from spoiling on the surface, hence leaving permanent stains.

The stainless steel surrounds and back panel

This stainless steel structure should be cleaned regularly, using a standard detergent and a damp sponge.

Do not wipe in an irregular fashion, or by using circular movements.

A mildly abrasive sponge can also be used, respecting the polishing direction.

An oven spray should be used to clean off any baked-on grease from the back panel. Spray on the product, wait 20 to 30 minutes, then simply wipe off the dissolved grease with a cloth or damp sponge. Nevertheless, to clean stainless steel, we recommend spraying the cleaning product directly onto the sponge, or the use of a knife blade, covered with a cloth, to clean out the space between the hob and back panel.

Remember: oven sprays are powerful products and therefore should only be applied to the parts we have specified. Never apply it to front panels, bars and control knobs.

Depending on how often you use your stainless steel fittings, thorough cleaning may be necessary to restore them to their initial. To do this, use scouring cream or special powder for stainless steel.

After thoroughly removing any baked-on grease from the steel, clean with methylated spirits or turpentine.

THE OVEN

The "La Cornue" **vaulted oven** principle and the quality of convection obtained, considerably limit oven cleaning problems. Nevertheless, oven preheating is essential to guarantee efficiency of use.

The "clean email" oven

The "clean email" system is a new way to avoid chemical reactions and carbonisation. In fact, it is far less aggressive than the decomposition of organic matter at 500°C (930 °F), and decomposition through oxidation of the catalysis self-cleaning system. The manufacturing process and composition of these special enamels is carried out at a temperature of 1300°C (2 370 °F).

The result is a perfectly smooth enamelled surface, which is difficult for food to adhere to. Any eventual soiling or boil-over spills, occurring when cooking on the enamel surface, can be removed at room temperature with a damp sponge. We recommend wiping it down after each use, while the oven is still warm, which will prevent baked-on spills or splatters and smoking from occurring, when it is next preheated. If maintenance has not been carried out at regular intervals, it is possible to spray on an oven scouring powder to remove the tougher stains. A high resistance to chemical reactions and high temperatures ensures a long service life for your oven walls. If the inside of the door has yellowed, you can rub it clean with a square scouring pad and soap gel, polishing in the suitable direction.

Baking Stone (option for electric oven)

Remember, the most important rule is to clean the stone after each cooking session with a non-metallic brush. If simple cleaning does not seem enough to you, wash the plate with a non-abrasive sponge dampened in lukewarm pure water and dry thoroughly with a paper towel or a cloth.

*Never use abrasive powders, aggressive detergents or metal wire sponges.
Remember: Thoroughly dry the stone before placing it back in the oven.*

THE EXTRACTOR HOOD

The filters can be cleaned in the dishwasher every 2 to 4 weeks, depending on frequency of use.

The underside of the hood should be degreased from time to time using terebenthine on a paper towel; it is preferable to do this with the windows open.

The bulbs can also be cleaned, after cooling, with methylated spirits or turpentine.

Remember: If you turn on your extractor hood before each cooking session, your cooker will require less cleaning.

Caution: Spotlight bulbs within the hood should be replaced as soon as they blow so as not to overload the remaining bulbs.



Ateliers La Cornue

B.P. 99006
95070 CERGY-PONTOISE cedex
FRANCE
Telephone : 33 (0)1.34.48.36.36 • Fax : 33 (0)1.34.64.32.65

MAISON LA CORNUE LONDON

CAPRICORN HOUSE
88 WIGMORE STREET
LONDON W1U 3RB
Telephone : 44-207 224 3774 • Fax : 44-207 224 3775

Site web : www.la-cornue.com
E-mail : a.table@la-cornue.com

LA CORNUE DANS LE MONDE

ALLEMAGNE / GERMANY

LA CORNUE VERKAUFSBURO
DEUTSCHLAND
HARDSTR. 3
76530 BADEN BADEN
TEL: 49 - 7221 - 94 91 94
FAX: 49 - 7221 - 94 91 96
Mr. Michel von Rosen

BELGIQUE / BELGIUM

ALFA BIS bvba
Nijverheiddkaai 2
B. 9040 GENT
TEL: 32 - 9 228 14 84
FAX.: 32 - 9 228 06 13
Olivier et Peggy Vermast-
Vanwelden

CANADA

MAISON LA CORNUE
OF MONTREAL
365 LAURIER OUEST
MONTREAL, QUEBEC H2V 2K5
TEL: 1 - 514 277 0317
FAX: 1 - 514 270 6949
Johanne et Jean-Pierre Dastous

DANEMARK / DENMARK

BASALT INDRETNING
ST. STRANDSTR. 21
1255 KOBENHAVN
TEL.: 45 - 33 14 13 16
FAX: 45 - 33 14 13 17
Mrs. Anne Fabrisius

ESPAGNE / SPAIN

SANTA & COLE
J.Sébastien Bach 7
08021 - BARCELONA
TEL: 34 - 932 - 418 740
FAX: 34 - 932 - 098 372
Mrs Ariana de Salvador

ETATS - UNIS / UNITED STATES

PURCELL-MURRAY INC.
185 PARK LANE
BRISBANE, CA 94005
TEL: 1-415 - 656 81 12
FAX: 1-415 - 468 06 67
Mrs. Anne Murray

GRANDE - BRETAGNE / GREAT BRITAIN

MAISON LA CORNUE LONDRES
CAPRICORN HOUSE
88 WIGMORE STREET
LONDON W1U 3RB
TEL: 44-207 224 3771
FAX: 44-207 224 3775
Mr. Michael Michael

GRECE / GREECE

BUILT - O Ltd.
138 KIFISSIAS AVENUE
15125 MAROUSSI
ATHENES
TEL: 30 - 210 - 80 20 557
FAX: 30 - 210 - 614 06 32
Mr. Dimitris Kapetanos

IRLANDE / IRELAND

CAMPBELL & COOKE LTD
The Clubhouse,
20 Lower Georges Street
Dun Laoghaire, CO.DUBLIN
TEL: 353 1 663 61 66
FAX: 353 1 284 11 65
Mr. David Cooke

ISRAËL / ISRAEL

HIGH TOUCH
16 Galgaley Haplada st.
I.Zone Herzelia
TEL.: 972-9-9558429
FAX: 972-9-9587019
Mr. Avigdor Malkin

ITALIE / ITALY

MAISON LA CORNUE
VIA BORGOSPESSO 11
20121 MILAN
TEL: 39-02 76 39 49 54
FAX: 39-02 76 31 00 99
Mrs. Sandra Toscani - Grimoldi

LUXEMBOURG

ESPACE BULTHAUP
58 ROUTE D'ARLON
8008 STRASSEN
TEL.: 352 - 45 45 04
FAX: 352 - 44 38 58
Mr. Xavier Négélé

NOUVELLE - ZELANDE / NEW ZEALAND

AMBIANCE INTERIORS Ltd
375 PARNELL ROAD
AUCKLAND
TEL.: 64 - 9 - 35 82 660
FAX: 64 - 9 - 30 90 444
Mr. Andrew Price

PAYS - BAS / NETHERLANDS

H.G.M. BOS
WAALSEWEG 28
3999 NS TULL EN'T WAAL
TEL.: 31 - 30 - 601 96 70
FAX: 31 - 30 - 601 96 71
Mrs Joritt Bos

JACOBSE B.VV
LIVINGSTONEWEG 46
4462 GL GOES
TEL.: 31 - 113 - 250 666
FAX: 31 - 113 - 250 668
Mr Piet Jacobse

POLOGNE / POLAND

UNIMAX GALERIA WNETRZ
ul. Kopernika 8 / 18
00-367 WARSZAWA
TEL.: 48 - 22 692 43 13
FAX: 48 - 22 692 43 14
Mr Krzysztof Gawkowski

RUSSIE / RUSSIA

MAISON LA CORNUE MOSCOU
KOTELNICHESKAYA NAB. 1/15
109240 MOSCOU
TEL.: 7095 - 915 74 37
FAX: 7095 - 915 75 63
Mrs Marie Dostal

SUEDE / SWEDEN

CORDON BLEU AB
VASAGATAN 48
11120 STOCKHOLM
TEL.: 46 - 8 - 411 00 81
FAX: 46 - 8 - 10 05 69
Mrs. Helen Ask Cuvelier

SUISSE / SWITZERLAND

MATERIAUX D'EXCEPTION
ESPACE LA DEMEURE
LA COMBE
1148 CUARNENS
TEL.: 41 - 21 - 864 54 51
FAX: 41 - 21 - 864 54 15
Mr. Jean - François Virgilio

TURQUIE / TURKEY

ENKAY ELEKTRONIK SAN.VE
TIC. LTD. STI.
Alemdag Caddesi site Yolu N° 10
Enkay Plaza
Umraniye - ISTANBUL
TEL.: 90 - 216 - 634 44 44
FAX: 90 - 216 - 634 38 05
Mr. Guray Coskun

NOS GALERIES EN FRANCE

Galerie PARIS

18, rue Mabillon
75006 PARIS
TEL: 01.46.33.84.74 TEL: 01.46.33.83.15
FAX: 01.40.46.93.85
Mme Pauline de Vilmorin

Galerie Aix en Provence

60, cours Sextius
13100 Aix en Provence
TEL: 04.42.38.20.06
FAX: 04.42.38.20.08
Stéphane et Philippe Bernard

Galerie BIARRITZ

4, rue de l'Impératrice
64200 BIARRITZ
TEL: 05.59.24.54.17
FAX: 05.59.24.56.03
Mr Bernard Jourdan

Galerie Avignon

21, place Crillon
84000 AVIGNON
TEL: 04.90.16.92.22
FAX: 04.90.16.90.15
Stéphane et Philippe Bernard

Galerie LYON

1, rue du Colonel Chambonnet
69002 LYON
TEL: 04.78.37.68.20
FAX: 04.78.37.58.25
Mme Chantal Maurel

Galerie Cannes

6, rue des Belges
06400 CANNES
TEL: 04.93.99.06.65
FAX: 04.93.39.21.28
Mr Jack Joubert

Galerie Toulouse

40, rue des Marchands
31000 TOULOUSE
TEL: 05.61.52.00.33
FAX: 05.61.52.30.84
Mme Suzanne Balz